


486 Wide Recessed Inside Release Handle

Part Number: 10486A

1. Starting at the door exterior surface, drill 3/4" dia. (19.1mm) through hole aligned with ISR feature on latch. Be certain to drill square to the door face as shown in **Fig. 1**.
2. Moving to the interior surface of the door, cut a 6" dia. (152.4mm), 1-5/8" (41.3mm) deep hole, located on center of the 3/4" through hole.


Fig. 1

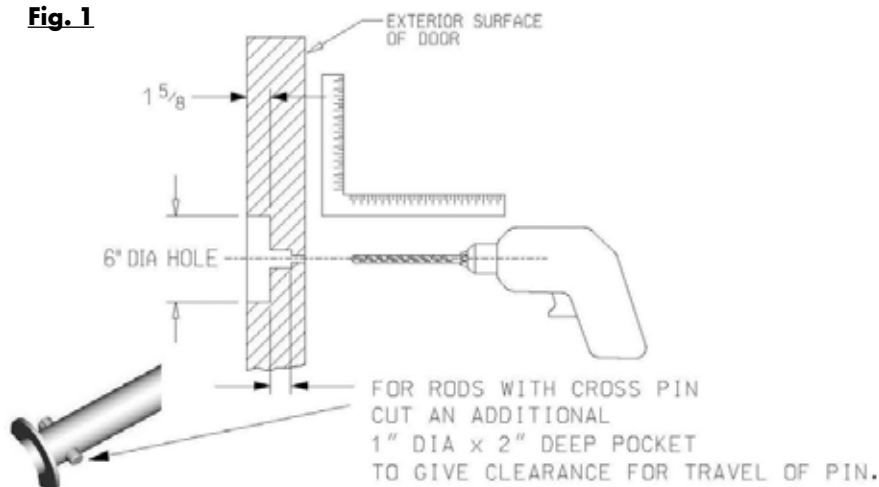

3. Hollow out the insulation within the cut-out area to the 1-5/8" depth. Hole will accept recessed housing as shown below. Check fit by placing recessed housing in large hole on interior side of door aligning center hole with 3/4" through hole. Push rod must move freely through insulation.

For Freezers: Fill warm side cavity with low temperature grease to limit air infiltration and ice formation.

Fig. 2

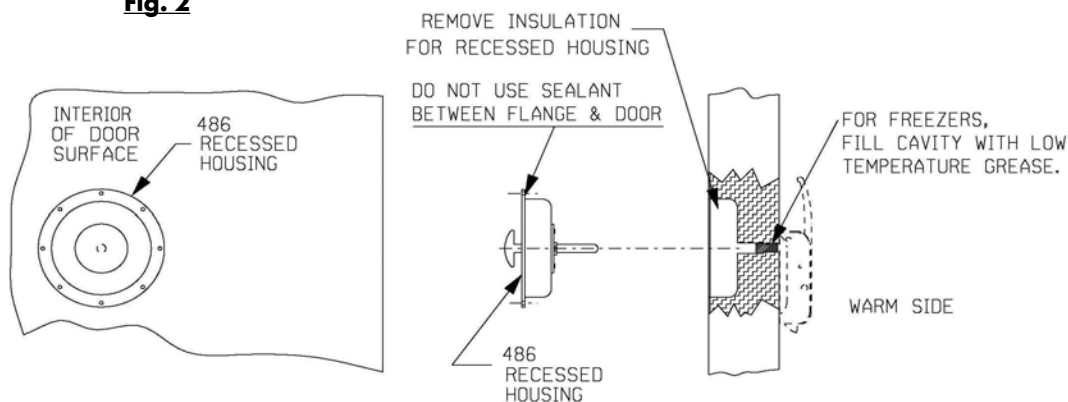

4. Mount housing to door with (8) eight #10 (5.0mm) round head screws.
 5. Test to assure latch release function.
- WARNING:** Function is critical. Entrapment in freezer can cause severe injury or death.